



*MANUFACTURING HIGH QUALITY
ENVIRONMENTAL ABATEMENT EQUIPMENT
SINCE 1988*



OmniAire 2200 Operations and Maintenance Manual

WARNING

**This equipment to be operated only by trained personnel.
 Do not use with combustible or explosive material.
 Do not expose to water or rain.
 Connect only to grounded outlet with GFCI device.
 Disconnect power for cleaning and servicing.**







CONFORMS TO UL STD 507
 CERTIFIED TO CAN/CSA STD
 C22.2 NO. 113-M1984

SPECIFICATIONS

- Motor:** 1.25hp, 115 V 12.0 amps, thermal protected
- Controls:** LOW/OFF/HIGH Speed Switch, vacuum gauge 0-5” W.C.
- Airflow:** 1000 & 2000 cfm.
- Final Filter:** HEPA 99.97% @ 0.3 micron,, particle board frame, 24”x 24”x11.5”
- Pre-filter:** 2-stage poly pad, 35% efficiency, 24”x 24”x 2”
- Housing:** Aircraft Grade Aluminum, mill finish
- Weight with Filters:** 125 lbs.
- Dimensions:** 34”L x 20”W x 31”H

ORDERING INFO.....PART #

- OmniAire 2200ULOA2200UL
- HEPA Filter 99.97%, 0.3μOAH2424L
- Primary/Secondary Filter (qty 20).....OAP2424
- Intake Manifold, 12”OAIM2200-12
- Carbon Vapor Trap Filter.....OCVT2424
- OdorGuard 600 Carbon FilterOG2424
- Bag Filter HousingHBF2200
- Bag Filter, MERV14OBF10
- Flexible Duct, 12” x 25’OAD12

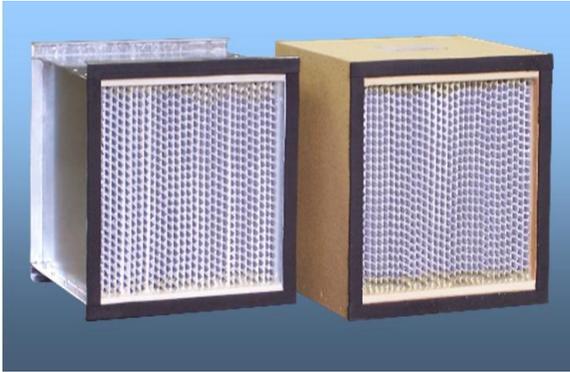

The OmniAire OA2200 comes standard with a particle board 99.97% 0.3 μ HEPA filter and can be upgraded to a metal frame Certified 99.99% 0.3 μ HEPA.

OPERATING INSTRUCTIONS

Unpacking: Visually inspect the unit for damage. Remove the primary/ secondary filter and ensure that the HEPA filter has not been dislodged during shipping. The HEPA filter should be sitting on the filter guides and the filter tabs that hold the HEPA filter in place should be tight. See Figure 1.

If the filter is not seated correctly then remove the filter tabs, reposition the filter, and reinstall the filter tabs before operation to ensure that there is no bypass around the filter.

If the filter tabs are loose verify that the filter is in the correct position and retighten the filter tab nuts.

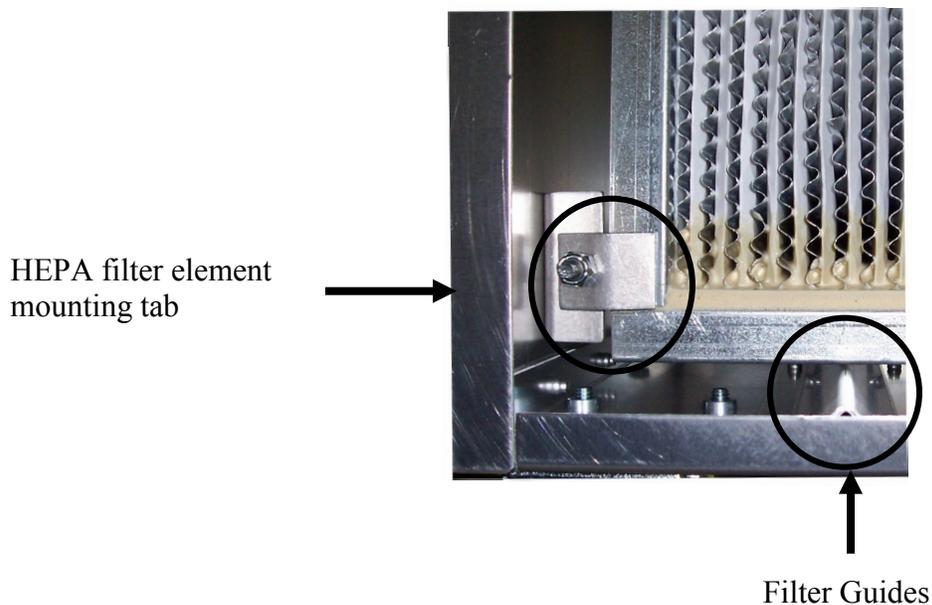


Figure 1

To create negative pressure inside the containment, more air has to be exhausted out than leaks into the containment. Place the machine inside the containment and hook a flexible duct to the outlet ring of the machine exhausting to outside the containment. (See Figure 2) All of the air being exhausted has been treated by the HEPA filter so no contaminants are being exhausted from the containment.

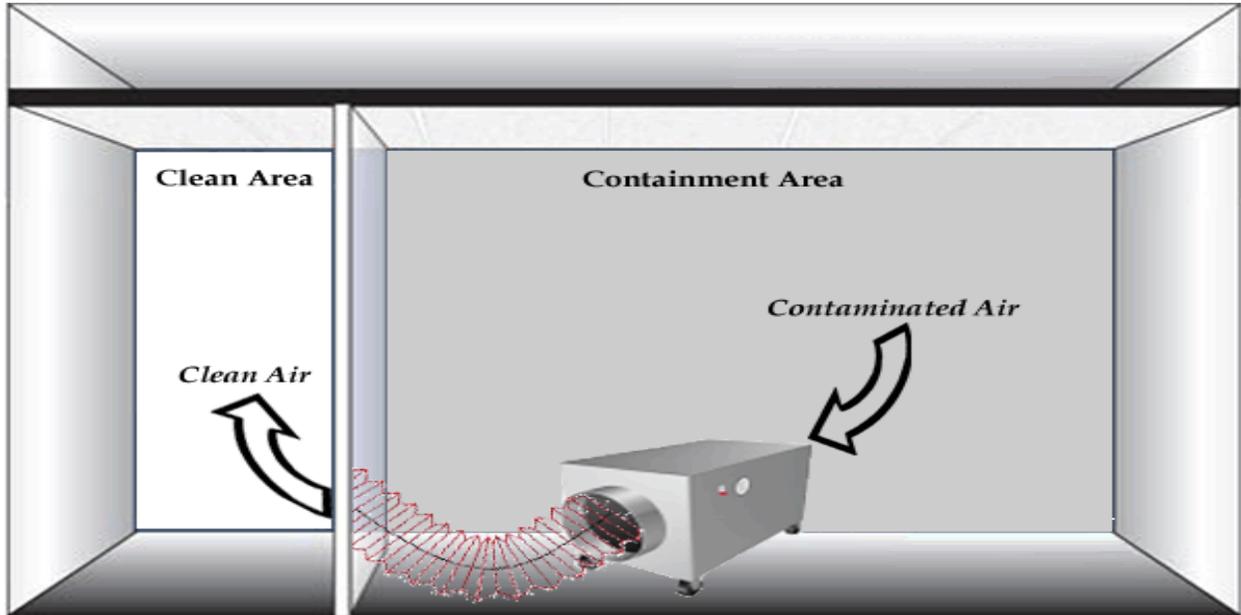


Figure 2

To create positive pressure inside the containment, more air has to be pumped in than leaks out of the containment. Place the machine outside the containment and hook a flexible duct to the outlet ring of the machine ducting the exhaust into the containment. (See Figure 3)

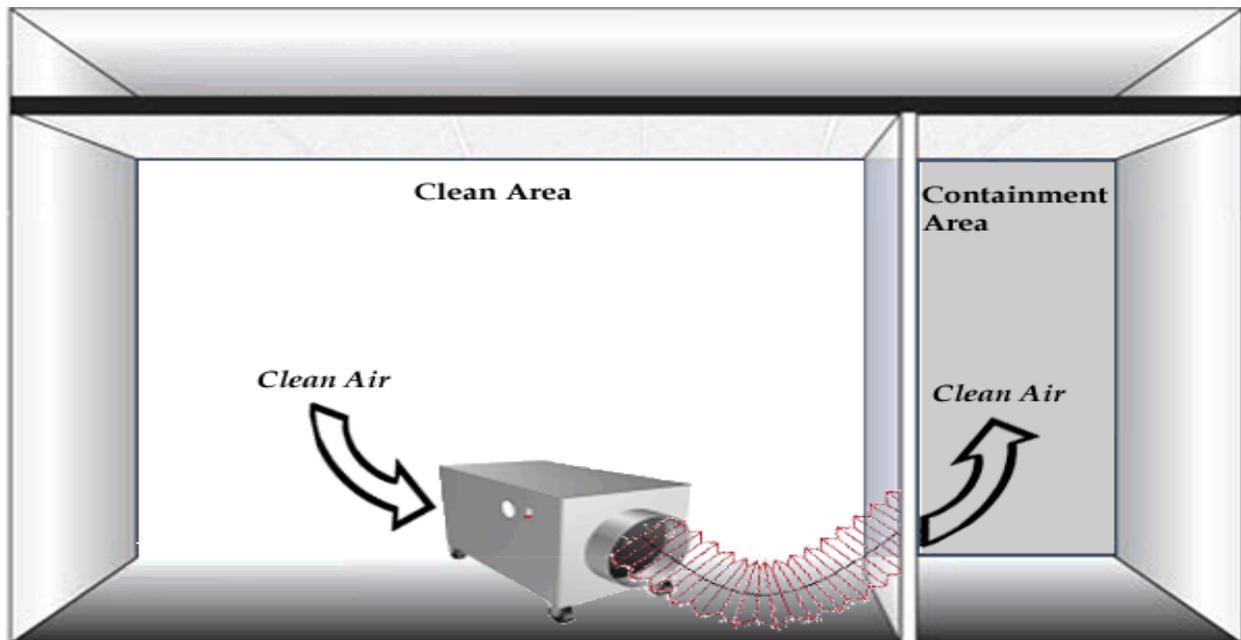


Figure 3

MAINTENANCE INSTRUCTIONS

Due to tolerance issues in the zeroing of the water column gauge please note the initial reading of the water column gauge with the machine in HIGH SPEED operation here _____.

REPLACEMENT OF THE PREFILTER

Once the gauge reads .3 above the initial reading with the machine in HIGH SPEED then the prefilter must be replaced. When replacing the prefilter ensure that the orange side of the prefilter is facing the HEPA filter. At this time the gauge reading will drop.

When the gauge reading does NOT drop after replacing the prefilter then the HEPA filter is full and must be replaced to maintain airflow.

Please note that even though the HEPA filter is fully loaded the filter is still removing the particulates from the air, but at a reduced airflow which will affect the ability of the machine to provide positive or negative pressure within the containment.

REPLACEMENT OF THE HEPA FILTER

To replace the HEPA filter remove the screen/manifold and remove the prefilter. You will see 4 filter tabs holding the HEPA filter in place. See figure 4 below. These tabs are secured with 1/4-20 Nylock nuts, which require a 7/16" wrench or socket to remove them. Remove all 4 filter tab retaining nuts and remove the filter tabs as well. Slide the HEPA filter out along the filter guides and remove it from the machine.

ALWAYS TREAT THE USED HEPA FILTER AS HAZMAT AND PROCESS IT ACCORDING TO YOUR ESTABLISHED HAZMAT PROCEDURES.

To replace the HEPA filter ensure that the gasket on the HEPA filter faces inwards toward the flange, slide the filter in place along the filter guides and re-install the filter tabs and filter tab securing nuts. The nuts should initially be tightened to where the stud is flush with the end of the nut. This will compress the gasket on the filter approximately 1/2 of the thickness. This allows for the filter to be resealed and tightened at a later time if necessary.

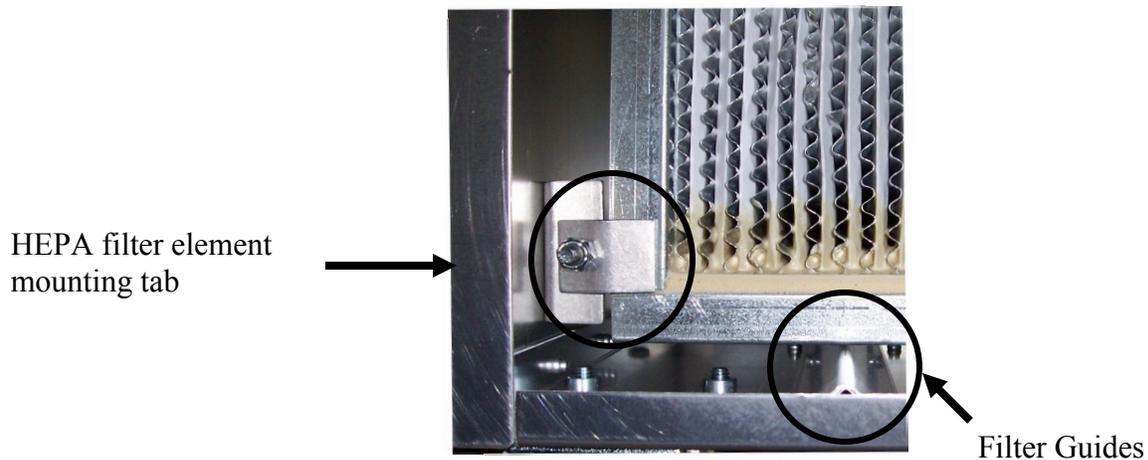


Figure 4

Troubleshooting

Your Omnitec Design machine is designed and engineered to provide years of trouble free service. Occasionally though problems do occur. Here are some helpful tips and solutions to common problems.

The machine does not start or just hums when turned on

1. Check the circuit you have the machine on and ensure that it has power.
2. Remove the HEPA filter and push the blower wheel by hand. If it does not move freely or if you hear a grinding/scraping noise as you spin it then the blower wheel is touching the side of the blower housing. The most common reason for this is that due to an impact of some kind the motor mounts have been bent. Remove the motor/blower assembly and replace the bent motor mounts.
3. If the blower wheel spins freely the next thing to check is the capacitor. With the HEPA filter still removed from the machine push the blower wheel and as it is spinning turn the power switch on. If the machine runs at this point then the problem is in the capacitor. Ensure that the wiring connected to the capacitor is plugged in and not broken. If the wiring is correct, then the capacitor is faulty. Replace the capacitor.


The machine will run for a few minutes then turn off

1. This machine MUST be run with a HEPA filter in place. If you are trying to run it without a filter in place the motor will overheat within a few minutes and the thermal overload in the motor will engage. Let the motor cool off for 30 minutes, install the filter and try running the machine again.
2. If the filter is in place and the machine still shuts off after a few minutes then the motor is faulty. Replace the motor.

The machine vibrates excessively when running

1. This is an indication that the motor bearings are worn. If the machine is allowed to continue running at this point the vibration will cause the center hub of the blower wheel to separate from the wheel requiring replacement of both the motor and blower. Replace the motor.

If the machine does require electrical servicing of the motor or switches the following page contains a wiring diagram to aid in repair or troubleshooting.

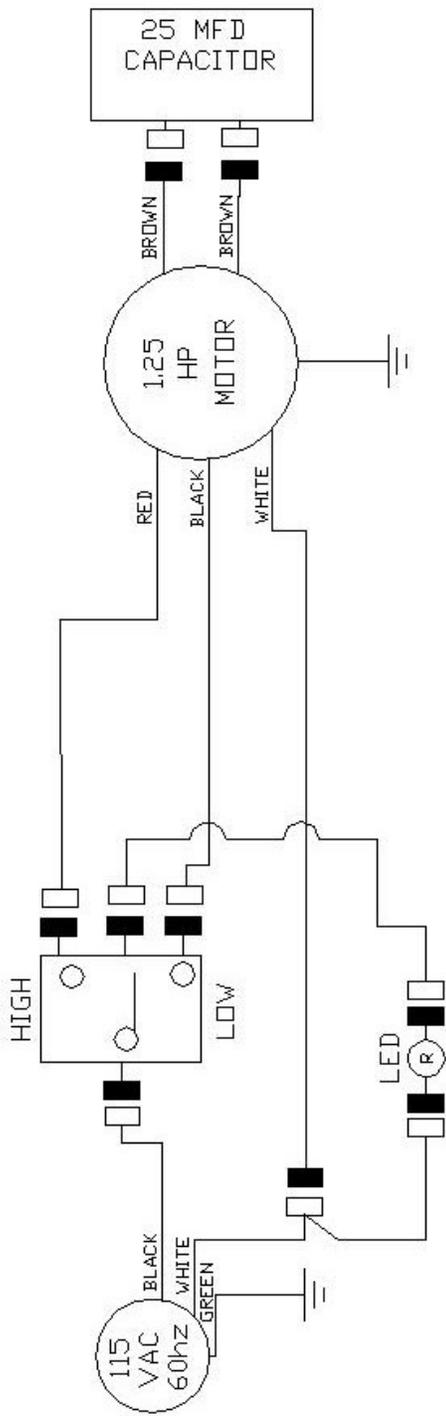

Dnritec Design 2125 196th St SW #115 Lynnwood, WA 98036	DA2200 Wiring Diagram	Revision B	Date 12/1/09
---	-----------------------	------------	--------------

Omnitec Design, Inc.

4640 Campus Place, Suite 110 Mukilteo, WA 98275

Visit us @ www.omnitecdesign.com

Office: 425-290-3922